

F3 - Rolling Display Time

1. Press "FUN" key - It will display "F1".
2. Press "NEXT" key twice - It will display "F3"
3. Press "ENT" key - It will display the current rolling display time, which is defaulted to 5 seconds.
4. Press "SEL" Key to select the digit you want to change
5. Press "NEXT" to select the number of seconds. This time is how long each call will display on the screen before rolling to the next call.
6. "00" means no rolling display
7. Press "ENT" - The 99P will beep when the setting is successful.

F8 - Display Time / Auto Cancel

1. Press "FUN" key - It will display "F1".
2. Press "NEXT" key three times - It will display "F8"
3. Press "ENT" key - It will display the current display time, which is defaulted to 20 seconds.
4. Press "SEL" Key to select the digit you want to change
5. Press "NEXT" to select the number of seconds. This time is how long each call will remain on the 99P before being automatically cancelled.
6. "00" means the call will not be automatically cancelled and needs to be cancelled manually.
7. Press "ENT" - The 99P will beep when the setting is successful.

F9 - Restore factory defaults

1. Press "FUN" key - It will display "F1".
2. Press "NEXT" key four times - It will display "F9"
3. Press "ENT" key - It will display "01".
4. Press "SEL" Key and "NEXT" Key to change the number to "00".
5. Press "ENT" Key to display "00" to "99" and beep to indicate the B-99P has been restored to its factory defaults.

For Three Key Call Buttons, the service type indicators are as follows:

Call service type: flickering number / Bill service type: non-flickering number

Model: B-99P Working Voltage: DC 12V Working Current: 450mA
Audio Output Power: 2W Transmit Frequency: 433MHz Receiver Sensitivity: 110dB



B-99P

Instruction Manual




Instructions

Features:

- ◆ Easy Installation
- ◆ Easy Operation
- ◆ Works with MAX 99 transmitters
- ◆ Has a bright LED Screen
- ◆ Can show service types—Call and Bill
- ◆ Has Adjustable Volume
- ◆ Can save 20 Calls in order and displays uncanceled calls

Sketch

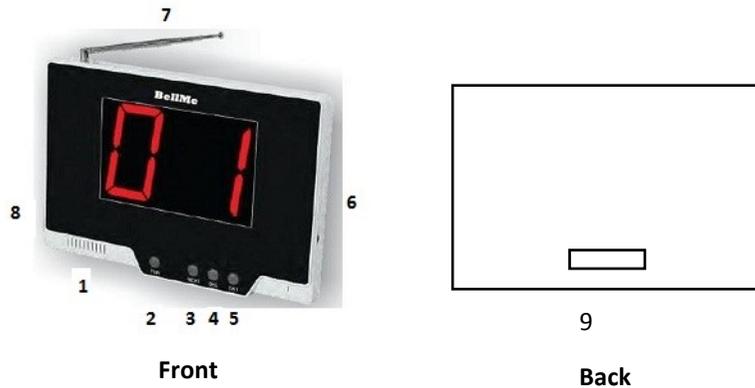

- | | | |
|----------------------|---------------------|---------------------|
| 1. Loud Speaker | 2. FUN-Function Key | 3. SEL-Digit Select |
| 4. NEXT-Adjust Digit | 5. ENT- Confirm | 6. Volume Adjust |
| 7. Antenna | 8. Audio Output | 9. Power |

System Setting

When the power is on, the 99P will display "00" to "99" to "—" which is standby.

Functions

- | | | |
|-----------------------|------------------------------|-------------------------------|
| F1 - Save Transmitter | F2 - Delete Transmitter | F3 - Set Rolling Display Time |
| F8 - Display Time | F9 - Restore Factory Details | |

F1 - Save Transmitter

1. Press "FUN" key - It will display "F1".
2. Press "ENT" key - It will display "01".
3. Press "SEL" Key to select the digit you want to change
4. Press "NEXT" to select the number.
5. Once you have the 2 digit number you want to programme, press the Call Button for 2 seconds until the display shows the next available number to programme. This is useful when you have multiple Call Button to programme.
6. Test the Call Button by pressing "FUN" twice to go to standby and pressing the Call Button - your 99P will show the number you have programmed to that Call Button. If you have a Cancel Button, repeat the steps above, saving it to the same number as the Call Button

Note: When the 99P shows "E3", there is no space to save any more transmitters.
When the 99P shows "E1", it means this number has been saved already.

F2 - Delete Transmitter

1. Press "FUN" key - It will display "F1".
2. Press "NEXT" key - It will display "F2"
3. Press "ENT" key - It will display "01".
4. Press "SEL" Key to select the digit you want to change
5. Press "NEXT" to select the number you want to delete.
6. Press "ENT" - The 99P will beep to indicate the number has been deleted and will show the next available number to delete.

Note: To delete all transmitters repeat steps 1 - 4 and change the number to "00"
Press "FUN" twice to go to standby.