

Instruction Manual for B-650 Wrist Watch Receiver

Features:

- LCD Display with 3 alert modes:
 - Sound
 - Vibration
 - Sound and Vibration
- Works with Single Key and Three Key Buttons
- Works with a maximum of 256 transmitters
- Can store and track last 10 calls
- Shows the current time on standby mode
- Has 3 display modes:
 - Symbols
 - Text
 - Symbols and Text
- Rechargeable Battery



Functions:

- | | |
|--------------------------|-------------------------------|
| F1 – Save Call Button | F2 – Delete Call Button |
| F4 – Set Time | F5 – Alert Mode |
| F6 – Display Mode | F7 – Power Off |
| F8 – Button Type Setting | F9 – Restore Factory Defaults |

Operational Instructions:

To turn the B-650 on – Press and hold the “FUN” key for 3 seconds.
To open the different function settings - Press and hold the “FUN” key for 3 seconds.
To exit the function settings - Press the “FUN” key once.
The B-650 will automatically exit the function settings and go to standby mode after 40 seconds
The B-650 will go to standby mode after 10 seconds if it is not in use.

Detailed Functions

- F1 – Save Call Button
Press and hold the “FUN” key for 3 seconds to show “F - - 1”
Press the “ENT” key to show “0001”.
Use the “NEXT” key to select the digit you want to change.
Use the “SEL” key to select the number you want.
Press the “ENT” key to confirm. It will show “_ _ _ _”.
Press your Call Button for 2 seconds. The B-650 will beep twice and show the next consecutive number to programme.
Note:
When the B-650 shows “E1” it means that this Call Button has already been programmed to this B-650.
When the B-650 shows “E2”, it means that this number has already been programmed to this B-650.
When the B-650 shows “E3”, it means that the B-650 is full and cannot save any more Call Buttons

To exit the programming mode, press FUN twice to go to the main screen.

- F2 – Delete Call Button
Press and hold the “FUN” key for 3 seconds to show “F - - 1”
Press the “SEL” key to change it to F—2
Press the “ENT” key to confirm
Press the “SEL” key to choose the number you have allocated to the call button, e.g. 0001
Press the “ENT” key - the watch beeps
Press the “FUN” key twice to go back to main screen - Your call button has now been deleted

To delete all buttons off a watch:
Press and hold the “FUN” key on your watch until it shows: F--1
Press the “SEL” key to change it to F - - 2
Press the “ENT” key to confirm
Press the “SEL” key 9 times to show 00 00
Press the “ENT” key
Your watch will show 11 11 to 99 99 - All call buttons have now been deleted

- F4 – Set Time
Press and hold the “FUN” key for 3 seconds to show “F - - 1”
Press the “SEL” key to change it to F - - 4
Press the “ENT” key to confirm
Use the “NEXT” key to select the digit you want to change.
Use the “SEL” key to select the number you want.
Press the “ENT” key to confirm

- F5 – Alert Mode Setting
Press and hold the “FUN” key for 3 seconds to show “F - - 1”
Press the “SEL” key to change it to F - - 5
Press the “ENT” key to confirm
Use the “SEL” key to select:
1 – Sound only 2 – Vibration 3 – Sound and Vibration
Press the “ENT” key to confirm

- F6 – Display Mode Setting
Press and hold the “FUN” key for 3 seconds to show “F - - 1”
Press the “SEL” key to change it to F - - 6
Press the “ENT” key to confirm
Use the “SEL” key to select:
1 – Symbol Display (♣, \$, ?)
2 – Letter Display (A, B, C)
3 – Symbol and Letter Display
Press the “ENT” key to confirm

- F7 – Power off
Press and hold the “FUN” key for 3 seconds to show “F - - 1”
Press the “SEL” key to change it to F - - 7
Press the “ENT” key to show “OFF”
Press the “ENT” key to confirm

- F8 – Button Type Setting
Press and hold the “FUN” key for 3 seconds to show “F - - 1”
Press the “SEL” key to change it to F - - 8
Press the “ENT” key to confirm
Use the “SEL” key to select:
1 – Single Key Button 4 – Single Key & Three Key Button
Press the “ENT” key to confirm

- F9 – Restore Settings
Press and hold the “FUN” key for 3 seconds to show “F - - 1”
Press the “SEL” key to change it to F - - 9
Press the “ENT” key to show “0001”
Press the “SEL” key 9 times to show 00 00
Press the “ENT” key
Your watch will show 11 11 to 99 99

Factory Defaults:
Alert Mode Setting – Sound only
Display Mode Setting – Symbol Display
Button Type Setting - Single Key & Three Key Button

Please Note:

- The B-650 will show one call at a time. When there is only one call, the B-650 will show this call until it is cancelled on the watch by pressing the “ENT” key. When there are multiple calls, the B-650 will store the last 10 calls and show the latest call.
- To check the calls, press the “NEXT” or “SEL” keys. To cancel the calls, press the “ENT” key or the Cancel Key on the Three Key Button.
- When the battery is low, turn the B-650 off and charge it with the supplied Power Supply.

| | |
|--|-------------------------|
| Working Voltage: 3.7V (Li-ion battery) | Working Current: <15MA |
| Frequency: 433.92 MHz +/- 75k | Working Distance: >150m |
| Sensitivity: 85 dB | |
| Dimensions: 65mm x 44mm x 19mm | |