



 **Y-99E/433**

---


# **User Manual for Receiver**

# I. System Instruction

## 1. Features

- Can work with 300pcs 1-key transmitters in max
- Can rolling display the last 10 calls
- Can distinguish different zones of call number, or show how many uncanceled calls
- Cancel calls via "cancel" key on transmitter or be automatically cancelled
- Ring tone and volume are adjustable

## 2. Sketch

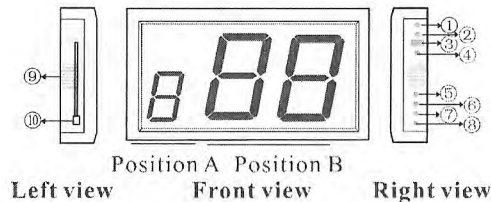

- ① Power ② Audio output ③ Flashing light ④ Volume adjust ⑤ FUN: function key  
⑥ SEL: digit select ⑦ NEXT: digit adjust ⑧ ENT: confirm ⑨ Speaker ⑩ Antenna

### Under setting status:

- ENT: confirm the setting  
SEL: select the digit  
NEXT: Adjust the digit (from 0~9)  
FUN: enter/exit setting

### Under working status

- SEL: query last calling record (query the last 10 calls)  
NEXT: query next calling record (query the last 10 calls)  
ENT: cancel the calling

# II. System setting

## 1. Brief instruction

- |     |  |
|-----|--|
| F01 | Save transmitter                                   |
| F02 | Delete transmitter                                 |
| F03 | Remind mode (Chinese voice or ring tone)           |
| F04 | Queuing mode select (queue mode or partition mode) |
| F05 | Display mode (single or rolling display)           |
| F06 | Rolling display time (from 05s-99s)                |
| F07 | Auto canceling time (from 0s-90s)                  |
| F08 | Select ring tone (7 kinds)                         |
| F09 | Restore manufacture settings                       |

**Enter setting:** Under standby status, press "FUN", receiver sounds "di" and shows "F01", and the last digit "1" flickers. Press "NEXT" to adjust the number (1~9), then press "ENT" to enter the relevant function setting.

**Exit setting:** Under main menu status, press "FUN" to return to standby status.

**Cancel operation:** Under setting status, press "FUN" to return to the main menu.

Note: During the setting, when press "ENT", the receiver will prompt setting failed if the parameter is out of the setting range.

Operation success: 2 short sounds of "di, di"

Operation fail: 2 long sounds of "di, di"

## 2. Detail instruction

**Power on:** Power on the device, the screen will show "000" ~ "999", then show "0--"

**F01 Save transmitter** (can save 300 transmitter in max, number from "001" to "三 99")

- 1) Press "FUN" key, receiver shows F01.
- 2) Press "ENT" key, receiver shows 001.
- 3) Press "SEL" and "NEXT" to adjust the number
- 4) Press "ENT" shows "--"
- 5) Press the transmitter for 2 seconds, then the display shows 001, the operation is success. Adjust the number then press "ENT" key can save another transmitter.

Note: a. Location A can show 0~9, A, b, C, d, E, F, H, L, P, U, 一, 二, 三. Only choose partition mode in "F04", the numbers can set into different groups with "A, b, C, d, E, F, H, L, P, U, 一, 二, 三."

b. Two 1-key transmitters can be set one same number for call and cancel.

c. if one transmitter has been save into the receiver before, the old number will be covered when saving a new number, and the old can save other transmitters.

### F02 Delete transmitter

Under "F02", press "ENT", receiver shows "001"

1) Delete single transmitter

Press "SEL" and "NEXT" to adjust the number, press "ENT", the device sounds "di, di" and show the next number, the transmitter is deleted. Press "FUN" twice to exit.

2) Delete all the transmitters

Press "SEL" and "NEXT" to adjust the number to "000", press "ENT" key, receiver will show "000" to "999" then the device sounds "di, di", and show "000" again, all the transmitters are been deleted. (Press "FUN" twice to exit.)

### F03 Remind mode

Under "F03", press "SEL" and "NEXT" to choose "1" or "2". Then press "ENT" to save the setting, press "FUN" to exit.

1 ----- Chinese voice (default setting)

2 ----- Ring tone

### F04 Queuing mode select

Under "F04", press "SEL" and "NEXT" to choose "1" or "2". Then press "ENT" to save the setting, press "FUN" to exit.

1 ----- Queuing mode. When choose "1", location A can show the quantity of the uncanceled calls, Press "ENT" to delete the current display number, the number of location A will minus 1. When location A shows "0", means there is no other calls waiting except the current displaying.

2 ----- Partition mode. When choose "2", the numbers can set into different groups with "A, b, C, d, E, F, H, L, P, U, 一, 二, 三" on location A, as the symbols of different groups.

Save number A01 into the receiver, under different modes, the receiver shows as below:



#### **F05 Display mode**

Under "F05", press "SEL" and "NEXT" to choose "1" or "2". Then press "ENT" to save the setting, press "FUN" to exit.

- 1 ----- Single display.
- 2 ----- Rolling display

#### **F06 Rolling display time (from 05s-99s)**

- 1) Under "F06", Press "ENT", it will show the current rolling display time. The default setting is 05, means the numbers will rolling display one by one every 5 seconds.
- 2) Press "SEL" and "NEXT" to adjust the number from "05" to "99".
- 3) Press "ENT" to save the setting, press "FUN" to exit

#### **F07 Auto canceling time (from 00s-90s, default setting: 10s)**

- 1) Under "F07", Press "ENT", it will show the auto canceling time, The default setting is 00, means the number will not be cancelled automatically. It should be cancelled manually.
- 2) Press "SEL" and "NEXT" to adjust the number from "00" to "99".
- 3) Press "ENT" to save the setting, press "FUN" to exit

#### **F08 Select ring tone (7 kinds)**

Under "F08", press "SEL" or "NEXT" to choose the ring tone. Then press "ENT" to save the setting, press "FUN" to exit.

#### **F09 Restore manufacture settings**

- 1) Under "F09", device shows "000"
- 2) Press "SEL" and "NEXT" to adjust the number to "000". Press "ENT" the receiver will show "000" to "999" then the device sounds "di, di", means the operation is success.
- 3) Press "FUN" to exit

### **III. Other instruction**

#### **Display status:**

Under single display mode, while the auto cancelling time is 10s, if receive receives multiple calls continuously, it will show the last call and display for 10s, then show the penultimate call.

Under rolling display mode, while the rolling time is 5s and auto canceling time is 20s, if receive receives multiple calls continuously, the last 10 calls will rolling display, each call display for 5s and exist in the receive for only 20s.

**Query calls:** under working status, press "SEL" or "NEXT" key to query the last 10 calls.

**Delete calls:** under working status, press "ENT" to delete the calling number.

### **IV. Technical specification**

Model number: Y-99E                      Dimension :535×158×40mm  
Working voltage: DC 12V                  Working current: < 900MA  
Frequency: 433.92Mhz±75k              Audio output: 2w                  Sensitivity: 106dB